# Butler Package®

## **BUTLER PACKAGE 1**

For models MS 90E to MS SUPER 3E

### **BOX CONTENT**

• AutoFlush®

- iTempoPlus<sup>®</sup> Control AromaSteam Steamhead
  - SteamLinx<sup>™</sup>
- Condensation Pan

## **BUTLER PACKAGE 2**

For models MS SUPER 4E to MS SUPER 6E

### **BOX CONTENT**

Same as Butler Package with an additional Steamhead, AutoFlush, and Condensation Pan.

**NOTE:** When ordered with the Linear Steamhead, standard-Steamhead(s) are replaced with 104216 Linear Steamhead(s)

**FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION** visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	SHAPE	FINISH	PROJECT INFORMATION
MS BUTLER 1	RD Round	PC - Polished Chrome	Location:
MS BUTLER 2	SQ Square	BN - Brushed Nickel	Architect:
		PN - Polished Nickel	Engineer:
		ORB - Oil Rubbed Bronze	Contractor:
		BB - Brushed Bronze	Submitted By:
OPTIONS:		PB - Polished Brass	Submitted by.
Linear Steamhead		SB - Satin Brass	Date:
		BK - Black Fascia	
		WH - White Fascia	
		MB - Matte Black	
		RAW - Custom Plating	
Notes:			







## TECHNICAL SPECIFICATIONS

## iTempoPlus® Controls

iTempoPlus controls flush mount in the steam/shower enclosure through a  $2\frac{5}{2}$  wide x  $3\frac{7}{2}$  high hole. iTempo controls can also be surface mounted.

#### iTempoPlus Controls Feature:

- Solid brass decorative cover with choice of square or round styles in designer finishes
- Soft touch keypad
- Low voltage operation
- Programmable steam bath duration
- Programmable temperature

• Digital display

- AromaSteam Steamhead in matching finish and shape
- Compatibility with SteamLinx
- Clock
  ON/OFF control for AromaSteam and Chroma72
- Two programmable presets

The iTempoPlus controls are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 feet above the floor
- in a location representative of the desired steam bathing temperatures. Do not locate the control above or near the Steamhead or direct steam emissions.
- on a vertical wall

The control cable length is 30 feet. Insure that the control and/or steam generator are located accordingly.

An optional 60 ft. cable is available if required, PN 103990-60.

If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.

### FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE


**FREE INSTALLATION** visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.


#### **BOX CONTENTS:**

• iTempoPlus • Tube of Silicone Sealant

21/2

- Steamhead Owner's Manual
- Control Cable (30 ft.)

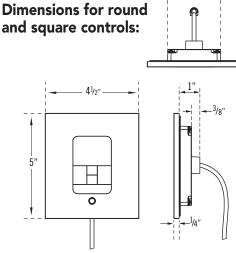

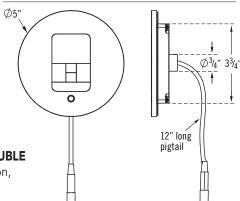

MODEL	SHAPE	FINISH	PROJECT INFORMATION
MS iTempoPlus	🗌 RD Round	BB - Brushed Bronze	Location:
	SQ Square	BN - Brushed Nickel	Architect:
		ORB - Oil Rubbed Bronze	- Engineer:
		PB - Polished Brass	
		PC - Polished Chrome	Contractor:
		PN - Polished Nickel	Submitted By:
		SB - Satin Brass	Date:
		BK - Black Fascia	Notes:
		WH - White Fascia	
		MB - Matte Black	
		RAW - Custom Plating	

**mt**.steam<sup>®</sup> Sussman-Automatic Corp<sup>®</sup> hello@mrsteam.com www.mrsteam.com 43-20 34th Street, Long Island City, NY 11101 tel: 1 800 76 STEAM fax: 718 472 3256 9410 S. La Cienega Blvd. Inglewood CA 90301 tel: 1 800 72 STEAM fax: 310 216 2944

# AutoFlush®


### **Box Contents**

- AutoFlush Valve with Cord
- Installation instructions

## Operation

The optional AutoFlush System feature automatically drains the Mr.Steam® system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

**Note:** If the Express Steam<sup>®</sup> option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle. AutoFlush Shown Fully Assembled

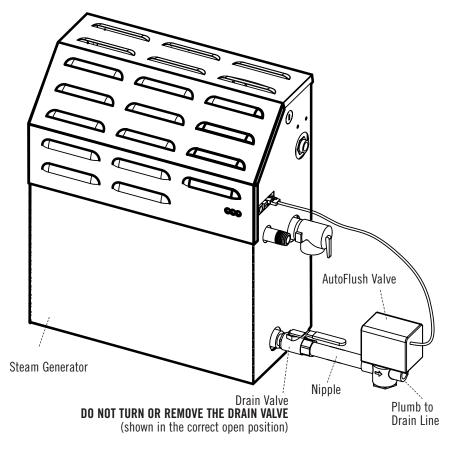

Our exclusive AutoFlush® automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

#### FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com or scan the QR code before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.



MODEL	PROJECT INFORMATION		
MS 81500E	Location:	Contractor:	
	Architect:	Submitted By:	
	Engineer:	Date:	
Notes:			

## Drip Pan мs 103867

Mr. Steam strongly recommends the use of a drain pan in the unlikely event of a plumbing leak.

Locate the drain pan on a solid level surface and place the steam generator inside the drain pan. Insure the steam generator is level.

All plumbing shall be performed by a qualified licensed plumber and in accordance with applicable national and local codes. Check local plumbing code for receptor, trap and vent requirements. Drain pans drain by gravity.

The drain pan is equipped with an integral 3⁄4" NPT fitting.

## FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com or scan the QR code before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.



25

MODEL	PROJECT INFORMATION		
MS 103867	Location:	Contractor:	
	Architect:	Submitted By:	
	Engineer:	Date:	
Notes:			

1.5'

## **Technical Specifications**

Round 103937, Square 104040, 104104

## AromaSteam Steamhead

- Even distribution of steam while remaining cool to the touch
- No field assembly required
- No moving parts
- Integrated aromatherapy oil well for in shower use

## Round & Square Steamhead Installation (1/2" NPT)

**IMPORTANT:** Do not disassemble steamhead. MrSteam's steam head is shipped fully assembled and requires no additional assembly.


**CAUTION** Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.


**NOTE:** A 1.5" clearance hole around the steam pipe is needed to mount the steamhead.

Locate steamhead 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938/10398SQ

**IMPORTANT NOTE:** To preserve steamhead finish, do not use wrench or other tools to tighten. DO NOT use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

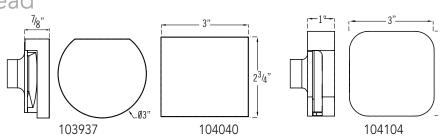

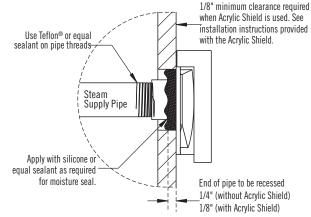

**CAUTION** Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938/ 103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

**FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION** visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH**	PROJECT INFORMATION
103937-Round	BB Brushed Bronze	Location:
104040-Square	BN Brushed Nickel	Architect:
ORB Oil Rubbed Bronze		Engineer:
	PB Polished Brass	Contractor:
	SB Satin Brass	
	PC Polished Chrome	Submitted By:
	PN Polished Nickel	Date:
	BLK Black***	Notes:
	WH White***	
	MB Matte Black	
	RAW Custom Plating	

\* 104104 Steamhead is used for AirTempo, iSteam and black/white facia iTempo and iTempoPlus.

\*\* For AirTempo select black or white with a decorative finish

\*\*\*iSteam, black/white fascia iTempo and iTempoPlus are provided with matching glass face and chrome trim only.

## SteamLinx™

### **BOX CONTENT**

- SteamLinx Generator Module
- SteamLinx Router Module
- 6 foot Ethernet Cord
- Power Adapter


#### **SteamLinx**

Introducing the latest Mobile Steam Room Technology, the SteamLinx Mobile System. SteamLinx allows for seamless control of essential steam room functionality using your smart phone or mobile device.

Included in all Dream & Butler Packages.

Works will all MrSteam Controls

App available for download from Google Play and the App Store

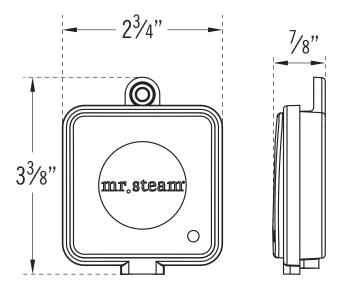



#### FOR ILLUSTRATIVE PURPOSES ONLY.

**IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION** visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION		
SteamLinx	Location:	Contractor:	
	Architect:	Submitted By:	
	Engineer:	Date:	
Notes:	1	1	

## Linear Steamhead

- Quiet, even distribution of steam
- No field assembly required Min

### Linear Steamhead Installation


(<sup>3</sup>⁄4" NPT)

**IMPORTANT:** Do not disassemble steamhead. MrSteam's steamhead is shipped fully assembled and requires no additional assembly.

Locate steamhead 6-12 inches above floor, except for tub/shower enclosures; install 6 inches above tub top edge.


### No moving parts


• Minimal profile

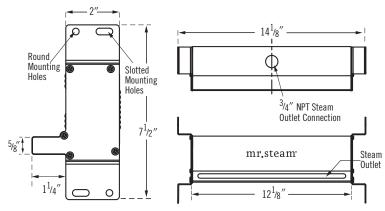

#### 

- Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.
- Linear Steam Head model 104216 is suitable for MrSteam generator models MS90–400, MSSUPER1–3 and CT6-CT15.
- Two 104216 linear steamheads must be used for models MSSUPER4, 5 & 6.
- Using model 104216 for any steam generator model larger than the MSSUPER3, or for any non MrSteam brand generators may result in an improper installation or hazardous condition.
- For residential and Day Spa use only.
- Install in a horizontal orientation only. Installation in a vertical orientation may concentrate the steam and result in excessive temperatures.

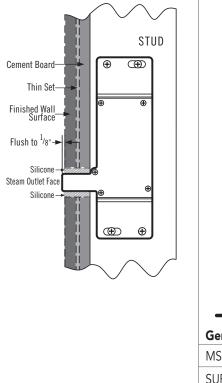

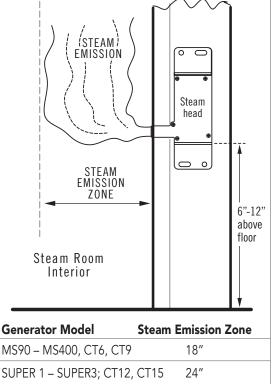

#### FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com or scan the QR code before installation to download the Installation. Operation and Maintenance

before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.



MODEL	PROJECT INFORMATION	
104216 For MS90 - MSSUPER3	Location:	Contractor:
and CT6-CT15 Two required for SUPER4, 5 and 6.	Architect:	Submitted By:
	Engineer:	Date:

Notes:

#### 104216