



accessories nereca

Installation

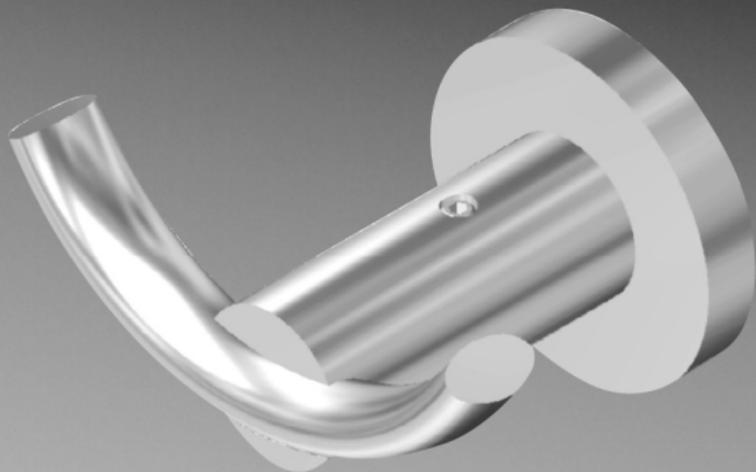

FRANZ
VIEGENER

Accessories Nerea Line

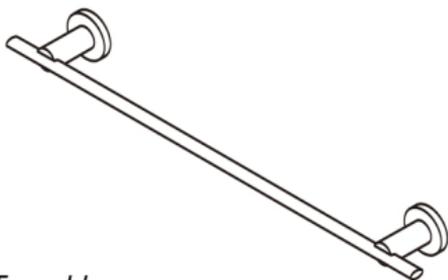

Towel bar

FV164/59 (17 11/16")


FV164.01/59 (23 5/8")

FV164.02/59 (29 1/2")




Robe hook

FV166/59

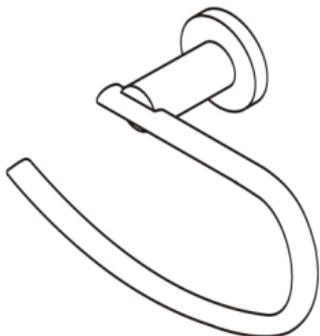

Towel ring


FV162/59

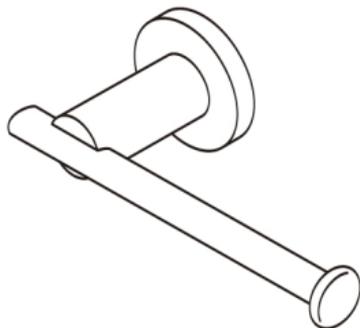

Toilet roll holder

FV167/59

Installation instructions

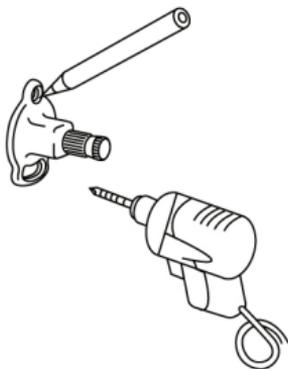


1_Using the support (in the position the figure shows), mark the place where you will drill the first hole to mount the accessory.

2_Make the necessary hole for No 6 plastic anchor and then put the plastic anchor.




3_Affix the support to the wall using the screws and the plastic anchors provided. Repeat the procedure (1 and 2) to complete the fixation of the support.

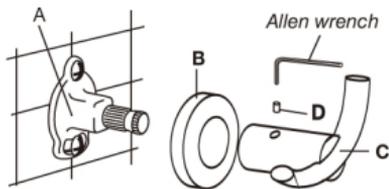

4_Slide the escutcheon (B) and the main part (C) over the support (A) until it bottom against the wall. Tighten the set-screw (D) with the Allen wrench.



Accessories with two supports

Assembling

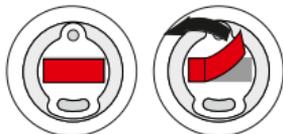

a Remove the tape from the back of the escutcheons.

b Attach the accessory to the wall applying pressure and remove the screw. Remove the accessory.

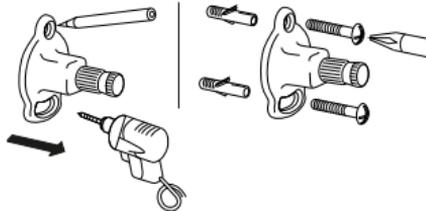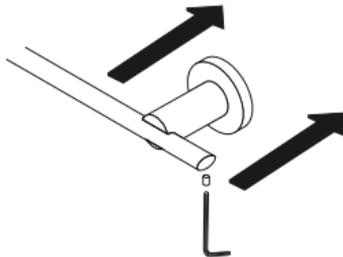

c Mark the places where you will drill before affixing it to the wall using the screws and plastic anchors provided

d Slide both escutcheon and the main part over the support until it bottom against the wall. Tighten the set-screw with the Allen wrench provided.

