


## OSLO COLLECTION

### SINGLE SHOWER DOOR HANDLE


1447506/7508/7512/7518/7524

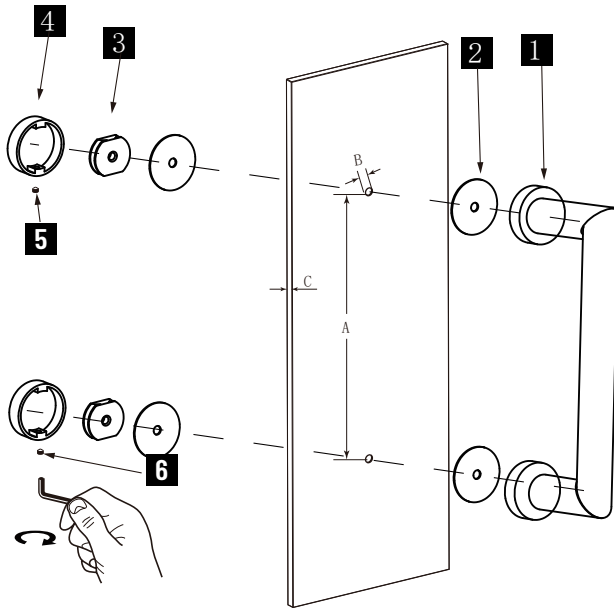


- 1. Handle A
- 2. Clear Gasket x 4
- 3. Fixing Bracket x 2
- 4. End Cap x 2
- 5. Set Screw M5 x 2
- 6. Allen Key 2.5mm x 1

#### GLASS INFO


		Glass Hole C-C Distance	
A	6"/152mm	6" Shower Door Handle	
	8"/203mm	8" Shower Door Handle	
	12"/305mm	12" Shower Door Handle	
	18"/457mm	18" Shower Door Handle	
	24"/610mm	24" Shower Door Handle	
B	1/2"(12mm)	Glass Hole Diameter	
C	6-12mm	Glass Thickness	

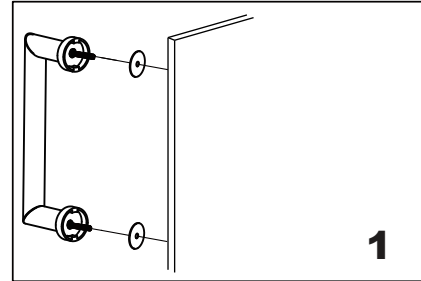


Install the handle A (bolt) through the glass holes, make sure the rubber gaskets are between handle & glass.

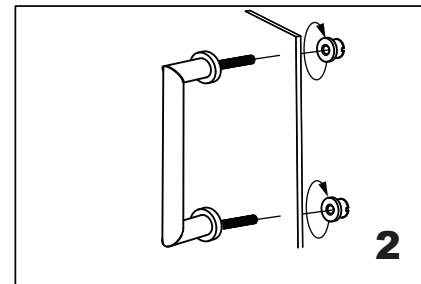

Screw in the fixing brackets into the handle bolts.

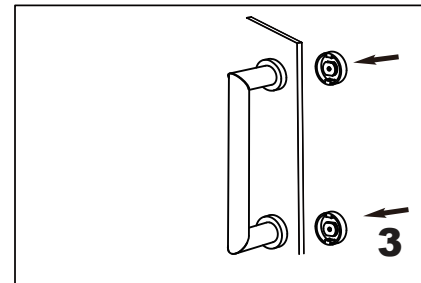

Add the end caps on the fixing brackets, make sure the set screws holes in the bottom.

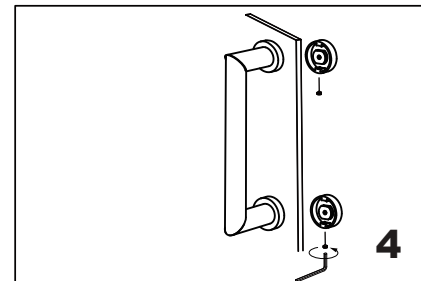

Fix the set screws on the end caps, tighten it to avoid loose from fixing brackets.