


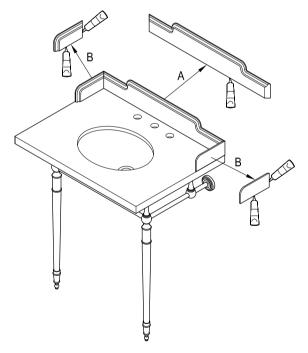

## Installation:

- Spread the adhesive on the bottom & back of the rear splash back (A), push the
  rear splash back into position. Make sure that the wall is clean, dry, smooth, and
  free of any loose paint or wallpaper before installing back or side splashes.
   See manufacturers instructions for drying time.
- 2. Repeat, if necessary with the side splashes (B).



www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS TECHNICAL SUPPORT E-mail: service@kingstonbrass.com 12775 Reservoir Street, Chino, CA 91710