


ASSEMBLY INSTRUCTIONS

Montreuil Floor Lamp

Item # ARN1025

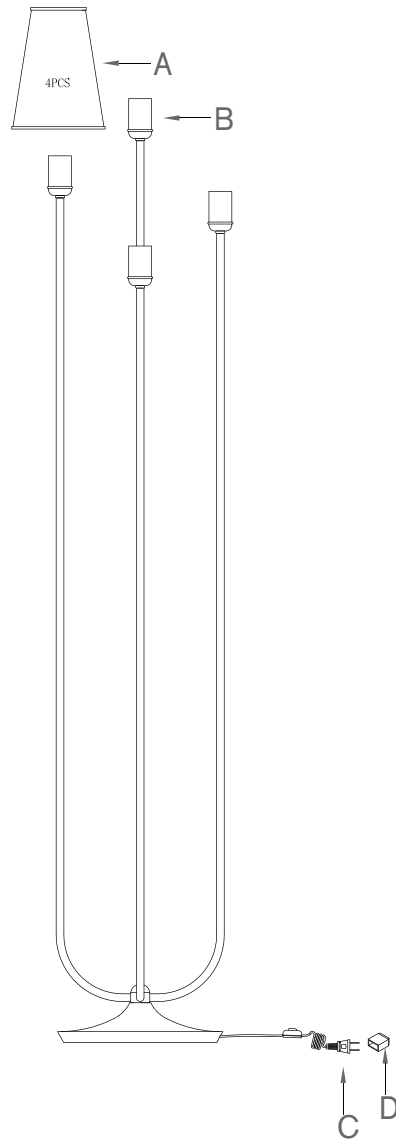

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Insert light bulbs (not included) Type B, maximum 40 watt into sockets.
3. Carefully slide the metal sleeve of bottom opening of shade (A) over the light bulbs and attach them onto the socket covers (B).
4. Remove plastic cover (D) from electrical plug (C).
5. Plug lamp into wall outlet.

***Clean with a dry, soft cloth only. Do not use harsh abrasives or chemical agents.